



800 Poertner Drive
Berea, OH 44017
1-800-648-8022

TECHNICAL BULLETIN # 1008

CORVETTE POWER VALVE REMOVAL INSTRUCTIONS

Removal:

- 1) Remove lines and drain power steering fluid.
- 2) Cap fittings to ensure no debris can get into the system. Label the lines to ensure proper replacement on installation.
- 3) Remove cotter pin and castle nut from the ball stud. Remove from the pitman arm.
- 4) Remove the retaining bolt that holds the valve to the relay rod
- 5) Unscrew the valve from the relay rod and remove

Reinstallation:

To reinstall power valve, reverse the procedure. Use new cotter pins.

Bleed power steering system according to the vehicle service manual.