

For safety, disconnect battery cables and ensure that vehicle is properly supported by jack stands.

NOTE: Power Steering Line Kit (FR1610) is sold separately and is not included in this kit.

Before paint or powder coating of the rack and pinion cradle system we recommend that you pre-fit the system to ensure proper fit.

NOTE: A front end alignment is necessary after installation.

NOTE: Flaming River Recommends that you use synthetic or high grade power steering fluid.

Kit Inventory	pg 3
Original System Removal	pg 4-6
Rack and Cradle Installation	pg 7-8
Tilt Column Installation	pg 9
Universal Joint and	
Steering Shaft Installation	pg 10
Steering Wheel Installation	pg 11
Power Steering Pump Installation	pg 12-13
Power Steering Bleeding Procedure	pg 14
Additional Installation Products	pg 15

WARRANTY DISCLAIMER: Flaming River's® Limited Warranty

Flaming River® warrants its products to be free from defects in material and workmanship for a period of one (1) year after the date of purchase, except that: All steering columns are warranted for a period of three (3) years from the date of purchase. The Big Switch (part number FR1005) is warranted for a period of three (3) years from the date of purchase, provided that it is not mounted with a steel bracket and provided further that it is adequately protected from environmental conditions. All electrical products other than the Big Switch are warranted for a period of ninety (90) days from the date of purchase. Flaming River's® warranty liability is limited to the replacement of defective products. Flaming River® is not liable for any labor costs associated with any warranty claim, or for any incidental or consequential damages. Improper installation, abuse, racing, and/or modification of the products voids this warranty. No warranty of merchantability or fitness for a particular purpose is made by Flaming River® with respect to any of its products. Warnings and Recommendations It is the customer's responsibility to determine the suitability of a given Flaming River® product for the customer's uses. Likewise, it is the customer's responsibility to install a Flaming River® product. Contact the vehicle manufacturer whenever installing a switch to confirm the appropriateness of using such a switch and the recommended placement of the switch on the vehicle. Use qualified chassis specialists for the installation of all steering related components. Be aware that the installation of certain Flaming River® products may adversely impact a manufacturer's warranty with respect to certain vehicles and other manufactured goods. Flaming River will repair or replace any product found to be defective in material or workmanship. Improper installation, abuse, racing and/or modification VOID WARRANTY. Flaming River® is not responsible for any labor costs associated with any warranty.

Item No.	Part No.	Description	Qty
1	100436	C-10 Power Rack and Mounting Cradle Assembly	1
2	FR1614	Power Steering Fluid Reservoir	1
3	BK10200	Support Bearing Bracket, Bent	1
4	FR1810	3/4" Zinc Support Bearing	1
5	FR1850	18" Length of 3/4" DD Shaft	1
6	FR1920	3/4" DD X 3/4" DD Universal Joint	1
7	FR1934	1" DD X 3/4" DD Universal Joint	1
8	FR1969	FR Power X 3/4" DD Universal Joint	1
9	FRPMPSB-V	Power Steering Pump w/ V-Belt Pulley	1
10	FR20300	Stramp Clamp	1
11	FR30106	73-87 GMC Truck Gear Shift Key Column	1
12	BOLT-3/8-16X1	1" Long 3/8"-16 Grade 8 Bolt	2
13	BOLT-7/16-14X1	1" Long 7/16"-14 Grade 8 Bolt	3
14	NUT-3/8-16	3/8"-16 Nylock Lock Nut	2
15	NUT-7/16-14	7/16"-14 Nylock Lock Nut	3
16	WASH-3/8"	3/8" Flat Washer Grade 8 Equ	4
17	WASH-7/16"	7/16" Flat Washer Grade 8 Equ	6
18	FR20118	Female Connector Kit	1





Removing Oniginal Steening System



Before beginning you must first measure the width of your front end from LEFT outer tie rod end zerk to the RIGHT outer tie rod end zerk to determine the overall width of your front end. Write dimension here for further reference

Caution: Before disconnecting your original steering column wiring harness please verify each wire color and function on the worksheet below. Some wire colors may vary from year to year.

Flaming River Column Wiring

P-White-Brakelight Switch
N-Dk Green-Rr Turn Signal
M-Yellow-Lr Turn Signal
L-Purple-Turn Signal Power

L-Purple-Turn Signal Power K-Brown-Hazard Power

J-Dk Blue-Rf Turn Signal

H-Lt Blue-Lf Turn Signal G-Black-Horn

Color Verification to be completed before disassembly

- Brake Light Switch : ______
- RR Turn Signal :
- LR Turn Signal :
- Turn Signal Power :
- Hazard Power :
- RF Turn Signal :
- LF Turn Signal :
- Horn :


Original Steering Shaft Removal



Remove the pinch bolt that retains the steering coupler to the steering column and the bolt that retains the rag joint to the steering box. Collapse shaft and remove it from the car.

Original Column Removal

Only perform these steps if using a new Flaming River Steering Column

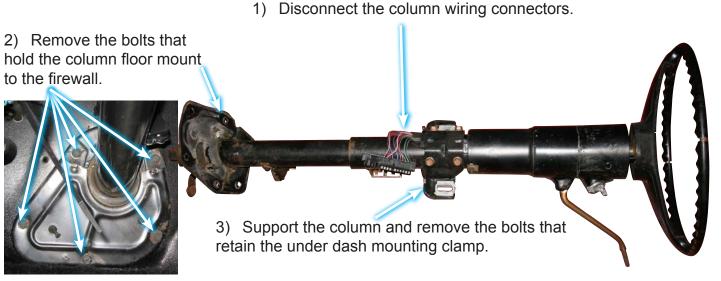

4) Remove the factory steering column from the vehicle.

Steering Box and Linkage Removal



1) Remove the pitman arm nut and then the pitman arm from the steering box using a pitman arm puller.

Idler Arm
Mounting Bolts

2) Remove the two bolts that retain the idler arm to the frame rail.



3) Remove the cotter pins and castle nuts and separate the outer tie rod ends from the spindles.






- 4) Next, remove the steering linkage from the car.
- 5) If you have power steering, remove the lines from your power box, pump and pump brackets.
- 6) Remove the three bolts that retain the box to the frame rail and remove the box from the car

Flaming River Rack and Pinion Cradle Installation


1) Remove the Rack from the cradle.

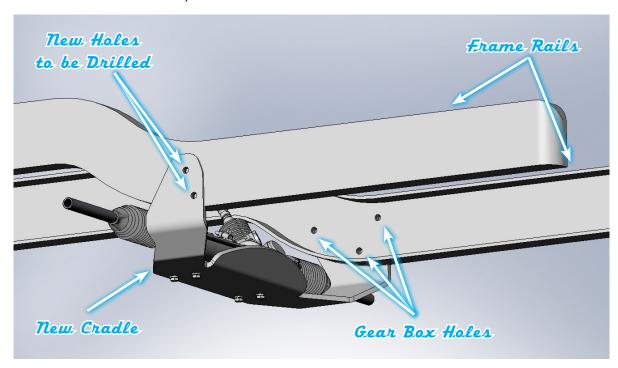

2) Install the rack and pinion cradle by sliding it over the frame rails



3) Installing the new hardware using three 7/16" bolts where the gear box was mounted and tighten the 7/16" nuts and bolts to 50-65 ft lbs.

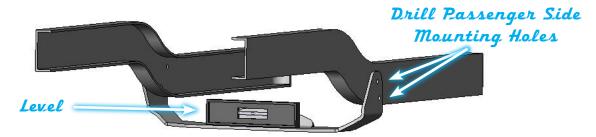

4) Next place a level on the cradle and the level the cradle. Once the cradle is level, then mark and drill the passenger side mounting holes.

Flaming River Rack and Pinion Cradle Installation (Continued)



5) Install the new hardware using two 3/8" bolts in the newly drilled holes on the passenger side and tighten the bolts to 40-45 ft lbs.

6) Re-install the power rack and pinion onto the cradle.





7) Install the outer tie rod ends into the inner tie rod ends and adjust tie rods until the original zerk to zerk measurement taken before disassembly is obtained. ______ (Measurement from page 4). To install the outer tie rod ends into the spindles you must load the front suspension. (Securely placing jack stands under the lower control arms and lowering the car onto the jack stands accomplishes this.) Install the outer tie rod ends into the spindle and tighten the castle nuts to 30-40 ft lbs. Make sure to install cotter pins into the castle nut and tie rod end and bend the tabs over for security.


Note: The new Flaming River Rack and Pinion has been centered in its travel from the factory. If the rack becomes off center it will turn more in one direction than the other. When performing the front end alignment, adjust your toe by rotating the inner ends only. You may have to re-center the steering wheel. To re-center the steering wheel: remove the wheel and adapter from the column and re-install in the straight position.

Flaming River Column Installation






- 1) Slide the new steering column through the opening in the original floor mount, and then slide the column through the opening in the firewall.
- 2) Hold the original mounting bracket from the vehicle around the column so that the mounting holes line up with the frame and determine where the column clamp needs to be placed on the column. Once this is determined place the set screws in the sides of the column clamp as shown. Tighten until the screws are snug but not cutting thru the rubber membrane or you will run the risk of scratching or marring the tube.
- 3) Mount the column clamp to the original mounting bracket using the original hardware (5/16-18 bolts) and then mount the bracket to the frame under the dash.

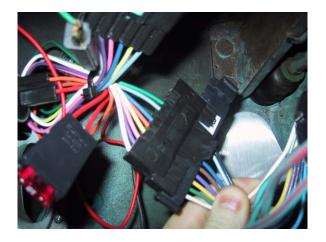

4) Install the wiring connector according to the diagram below.

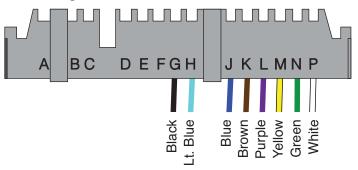

Flaming River Column Wiring

Flaming River Column Wiring

Wiring	Pin	Column Wiring
Circuit	Location	Color
Brake Light Switch Right Rear Turn Signal Left Rear Turn Signal Turn Signal Power Hazard Power Right Front Turn Signal Left Front Turn Signal Horn	P M L K J H G	White Dark Green Yellow Purple Brown Dark Blue Light Blue Black

Color Verification to be completed before disassembly

- Brake Light Switch:
- RR Turn Signal:
- LR Turn Signal:
- Turn Signal Power:
- Hazard Power:
- RF Turn Signal:
- LF Turn Signal:
- Horn :

Universal Joint System


** We recommend that you regularly inspect the u-joint set screws for tightness. **




1) Loosen the set screws in the rack mounting blocks. – This will allow to you to adjust the pinion angle for proper u-joint alignment.



2) Install support-bearing mount onto the inner front control arm bolt. (Picture below). Note: The angle of this mount is set for most applications. Some adjustment may be necessary for the correct angle and u-joint alignment.

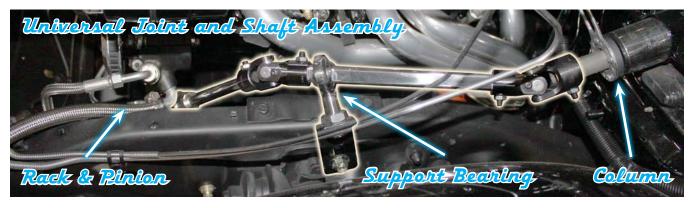

3) We recommend the use of ¾" wood dowel rod to mock up the steering shaft to obtain the correct length of the shafts.

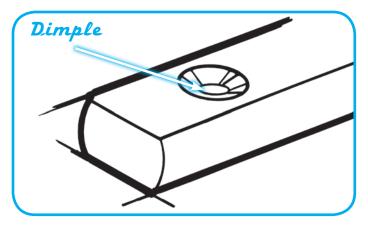




- 4) Install your shaft kit and snug each set screw so that it will leave a mark in the shafts.
- 5) Remove shaft and dimple each setscrew mark using a 1/4" drill bit. (As shown below.)
- 6) Re-install the shafts using red loc-tite thread locker on the set screw threads. Tighten each setscrew to 25 ft. lbs. Tighten all lock nuts securely. We recommend that you Inspect setscrews periodically for tightness.
- 7) Re-tighten the set screw that was loosened in the rack mounting blocks in step #1.


Steering Wheel Installation

Note: Before installing the steering wheel, make sure the wheels are straight.




1) Install horn contact kit into canceling cam tube and turn to lock (Included with column).

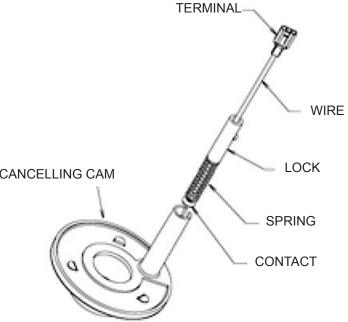


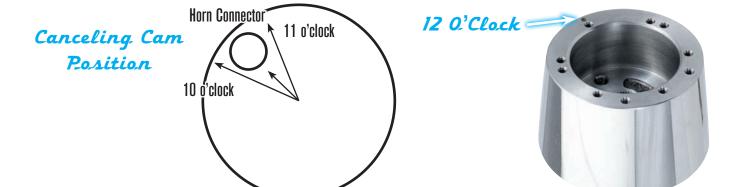

- 2) Align steering wheel adapter so that the canceling cam hole is at approx the 11 o'clock position and that one of the steering wheel mounting holes is at the 12 o'clock position.
- 3) To install the wheel adapter run the horn contact wire through the hole for the canceling cam and place the adapter on to the splined column shaft.
- 4) Tighten the adapter-retaining nut until the adapter is approximately 1/16" away from the column shroud.

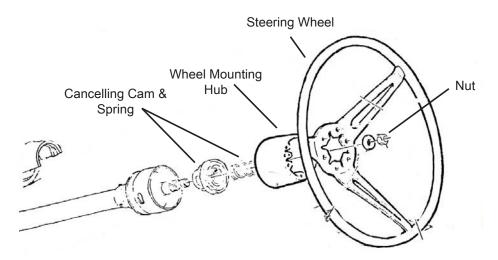

FR1612 Small Block Chevy Power Steering Pump Bracket

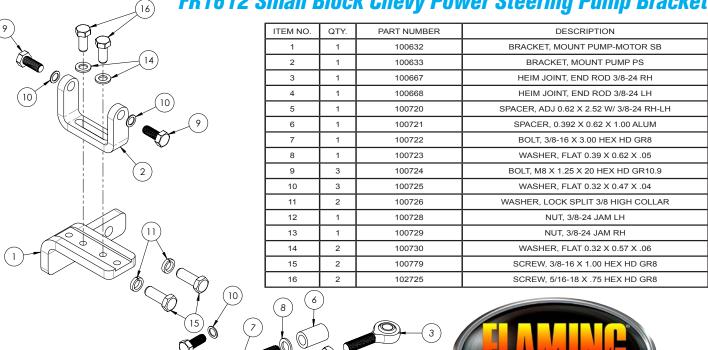

800 Poertner Dr., Berea, Ohio 44017 • 1-800-648-8022

Power Steering Pump Installation/Small Block Chevy



Install L-shaped bracket (1) on engine with bolts (15) and lockwashers (11) supplied



Install pump bracket (2) to L-shaped bracket (1) with bolts (16) and washers (14) supplied



Install pump to bracket (2) using bolts (9) and washers (10) supplied




Install adjuster to pump using bolt (9) and washer (10) supplied



Remove upper water pump bolt. Install spacer (6) and adjuster with bolt (7) and washer (8) supplied

SOLD SEPARATELY

FR1613 Big Block Chevy Power Steering Pump Bracket

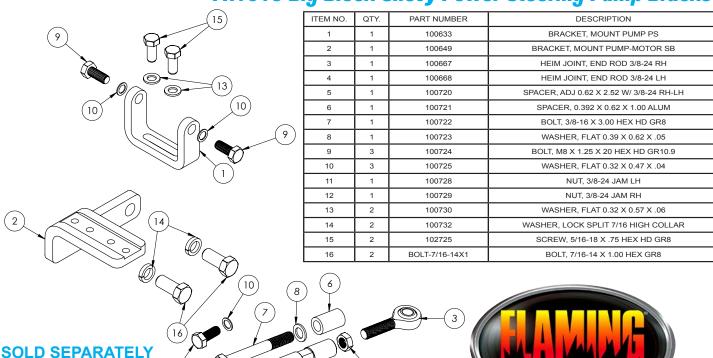

Power Steering Pump Installation/Big Block Chevy



Install L-shaped bracket (2) on engine with bolts (16) and lockwashers (14) supplied



Install pump bracket (1) to L-shaped bracket (2) with bolts (15) and washers (13) supplied



Install pump to bracket (1) using bolts (9) and washers (10) supplied



Install adjuster to pump using bolt (9) and washer (10) supplied




800 Poertner Dr., Berea, Ohio 44017 • 1-800-648-8022

Remove upper water pump bolt. Install spacer (6) and adjuster with bolt (7) and washer (8) supplied



Instruction Bulletin #1021 Correct Bleeding Procedure for Flaming River Power Rack & Pinion Systems.

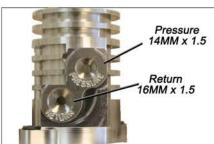

Make sure that all hoses (FR1610) are connected to the proper location. Reversing the power steering lines will cause damage to the valve that is not covered by the manufacturer's

All hose connections must be tight. (Loose connections might not leak but could allow air into the system)

Important

*** Power Steering Fluid*** Use clean, new power steering fluid only.

Turn Ignition Off



Start engine. With engine idling, maintain fluid level. Reinstall cap.



Raise front wheels off the ground.



Return wheels to center. Lower front wheels to the ground.



 
Turn the steering wheel full 9)



Keep engine running for



Fill fluid level to "Full Cold" level or if using remote reservoir 1" over inner





With assisant checking fluid level and condition. turn steering wheel lock to lock at least 20 times.

Note: On systems with long return lines or fluid coolers, turn steering wheel lock to lock at least 40 times.

> Trapped air may cause fluid to overflow. 11) If all proper conditions apply, Thoroughly clean spilled fluid to allow for



While turning wheels check 12) If any problem remains see fluid level constantly.

bleeding is complete.

'Special Conditions".

Smooth power assist

Proper fluid condition

No bubbles, no foam, no discoloration.

Noiseless operation Proper fluid level

No system leaks

Note: No bubbles are allowed.

For any sign of bubbles, recheck connections then repeat step 5.

Special Conditions:



Foam or bubbles in fluid

Fluid must be completely free of bubbles. Instep 5, be alert to periodic bubbles that could indicate a loose connection or leaky O-Ring seal in either the return hose or pressure

Discolored fluid (milky, opaque, or light tan color)

Switch ignition off. Wait two (2) minutes. Recheck hose connections. Repeat steps 7-10. If condition still exists, replace and check a possible cause:

- Return hose clamps
- Return hose o-ring
- Pressure hose o-ring
- Gear cylinder line o-rings

Fill system and repeat bleed procedure for each possible cause. Repeat steps 7-10 to verify whether noise has been eliminated.



Pump whine or groan

With engine running, recheck hoses for possible contact with frame body or engine. If no contact is found, follow either method below to cool down fluid and re-pressurize system.

Method 1: Normal Cool Down Method 2: Partial Fluid Replacement

Switch engine off. Wait for system to cool. Install reservoir cap.

Switch engine off. Use a Suction device to remove fluid from the reservoir. Refill with cool, clean fluid Install Reservoir cap.

After either method of cooling, start engine and allow engine to reach normal operating temperature. If noise persists, remove and replace power steering pump. Repeat bleed procedure following pump replacement.

WARRANTY DISCLAIMER:

Flaming River® warrants its products to be free from defects in material and workmanship for a period of one (1) year after the date of purchase. It is the customer's responsibility to determine the suitability of a given Flaming River® product for the customer's uses. Use qualified chassis specialists for the installation of all steering related components. Be aware that the installation of certain Flaming River® products may adversely impact a manufacturer's warranty with respect to certain vehicles and other manufactured goods. Flaming River will repair or replace any product found to be defective in material or workmanship. Improper installation, abuse, racing and/or modification VOID WARRANTY. Flaming River® is not responsible for any labor costs associated with any warranty.


Additional Installation Products









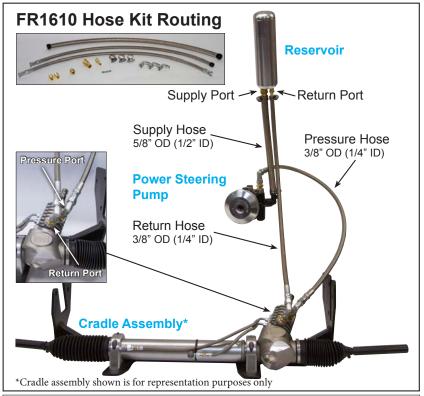



If not using our hose kit, we recommend purchasing the FR1632 Pressure and Return fittings kit. If you have any questions regarding connecting alternate hose kit to Flaming River Cradle Assembly, please call 1-800-648-8022.

In order to ensure the best customer experience possible, we've created a Customer Satisfaction Survey to gather important feedback about different facets of our business. We would appreciate it if you could please take a couple of minutes to fill out this survey about your experience.

The results of the survey will be used to improve and gather feedback about



customer service, technical and sales support, order processing and fulfillment, manufacturing, and new product development.

Upon completing the survey, you will be issued a discount coupon code to be used on your next online purchase at www.flamingriver.com/survey.



Flaming River Ind. 800 Poertner Dr Berea, OH 44017 800-648-8022